

WINEGARD®

RV TV ANTENNA REPLACEMENT HEAD MODEL RV2001A

Step 1. Remove existing antenna head, leveling bracket, 4 spacers, nuts and lockwashers.

Step 2. Attach antenna head to lift tubes with (2) steel pins as shown in Figure 1. Align holes in leveling bracket on back of antenna head with holes in lift tubes, insert pins and secure in place with retaining rings. Use pliers and get a firm grip on retaining ring. Fit ring into groove on pins and snap into place.

Step 3. Attach coax connector to jack on back of antenna head and slide boot into place over boot collar as shown in Figure 2.

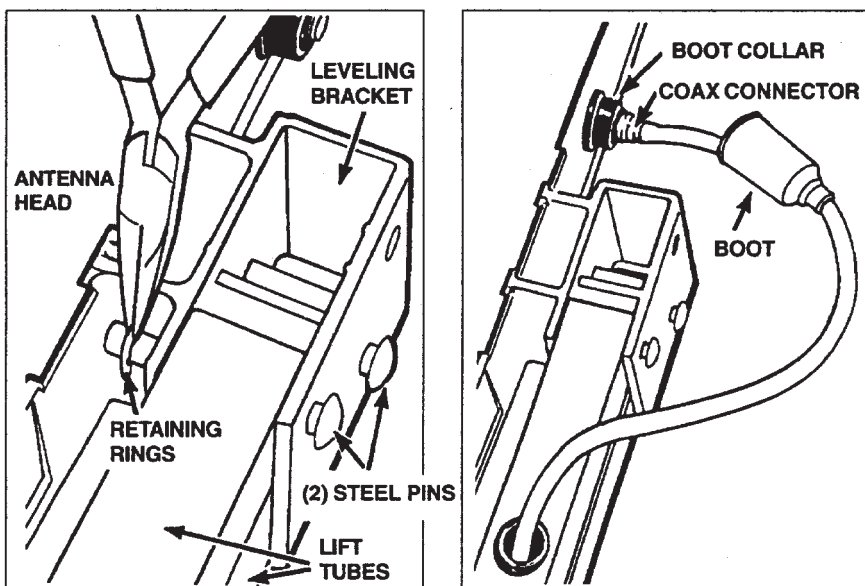


FIGURE 1

FIGURE 2

WINEGARD®

RV TV ANTENNA REPLACEMENT HEAD MODEL RV2001A

Step 1. Remove existing antenna head, leveling bracket, 4 spacers, nuts and lockwashers.

Step 2. Attach antenna head to lift tubes with (2) steel pins as shown in Figure 1. Align holes in leveling bracket on back of antenna head with holes in lift tubes, insert pins and secure in place with retaining rings. Use pliers and get a firm grip on retaining ring. Fit ring into groove on pins and snap into place.

Step 3. Attach coax connector to jack on back of antenna head and slide boot into place over boot collar as shown in Figure 2.

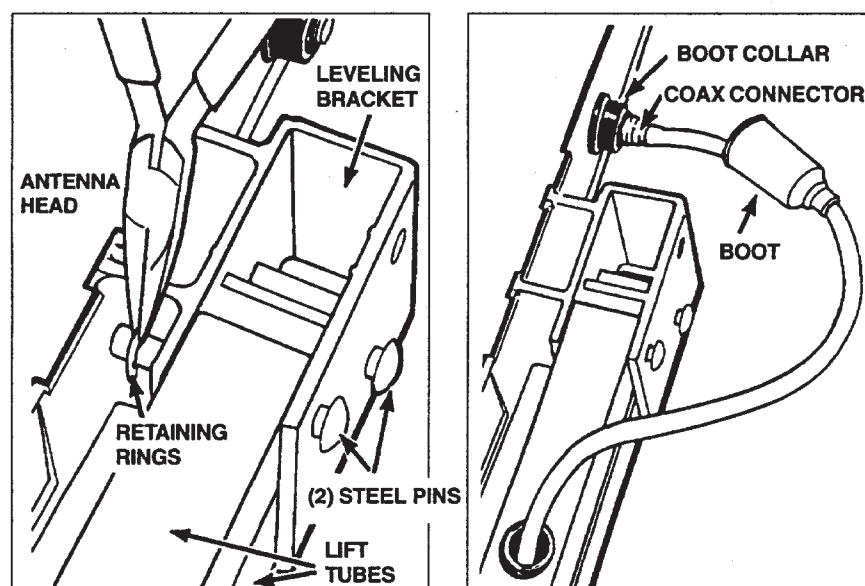


FIGURE 1

FIGURE 2