


WINEGARD®


Movin' View™ Upgrade Kit MV-6000 & DVB Installation

DO NOT PULL GPS WIRE OUT OF GPS MODULE INSIDE CONTROL BOX!


1. Shut off power with rocker switch.
2. Remove Radome and set aside.
3. Remove hex screws (there are nine) from control box. Also remove two screws holding down the motor cable.
4. Disconnect GPS wire at the connection outside the control box, Figure 1.

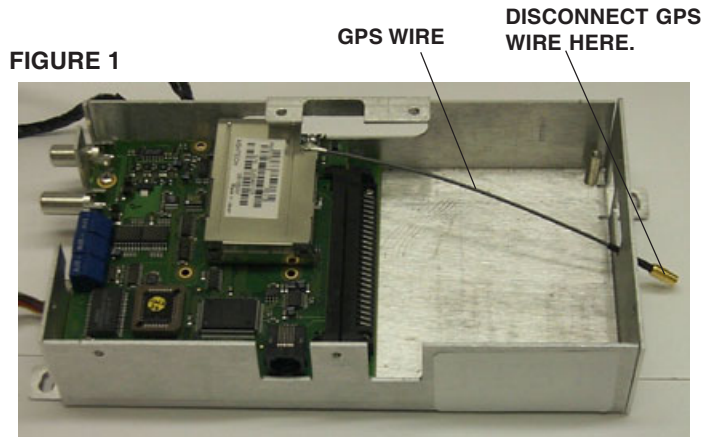


5. Carefully pull GPS wire inside the control box, Figure 2, so it will not interfere with placing the PC board in the housing.

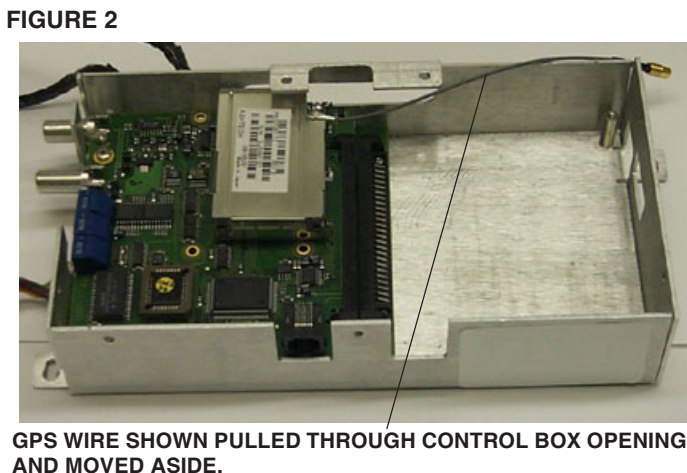


6. Slide electronics board into control box at an angle, under GPS wire, as shown in Figure 3. Push board into black plastic slotted connector on side of existing electronics board.

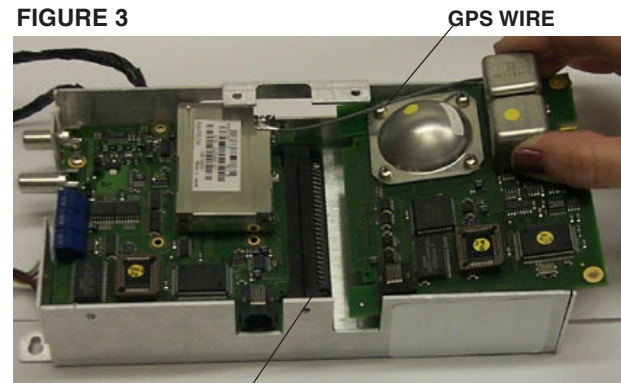

7. Screw electronics board down (2 screws), Figure 4.

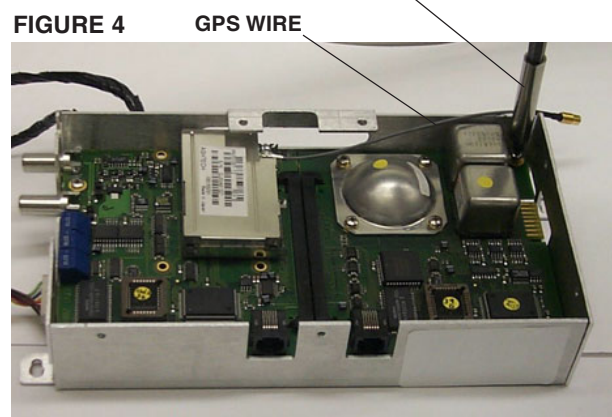

8. Carefully place GPS wire back out slot in control box and connect, Figure 5. Be sure it is not loosened at the GPS connection in the control box.

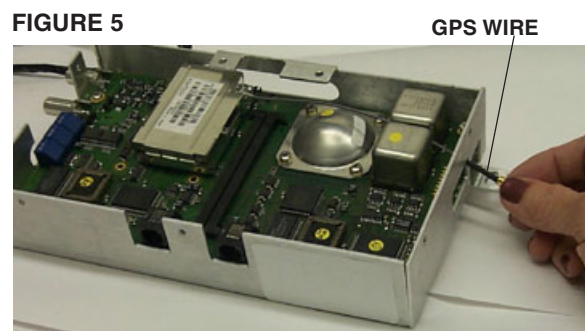

9. Screw cover back on control box using existing screws. Be sure motor wire is attached to control box and dish bracket clears GPS wire. You can spin the dish manually to make sure there are no obstructions.
10. Replace radome.

